


(FRAME DOCK APPLICATION SHOWN)

Telescopic Deep Water Brace Hardware Kit/
Ensemble de Pieces d'Entretoises Télescopique pour Eau Profonde

(info PN02050)

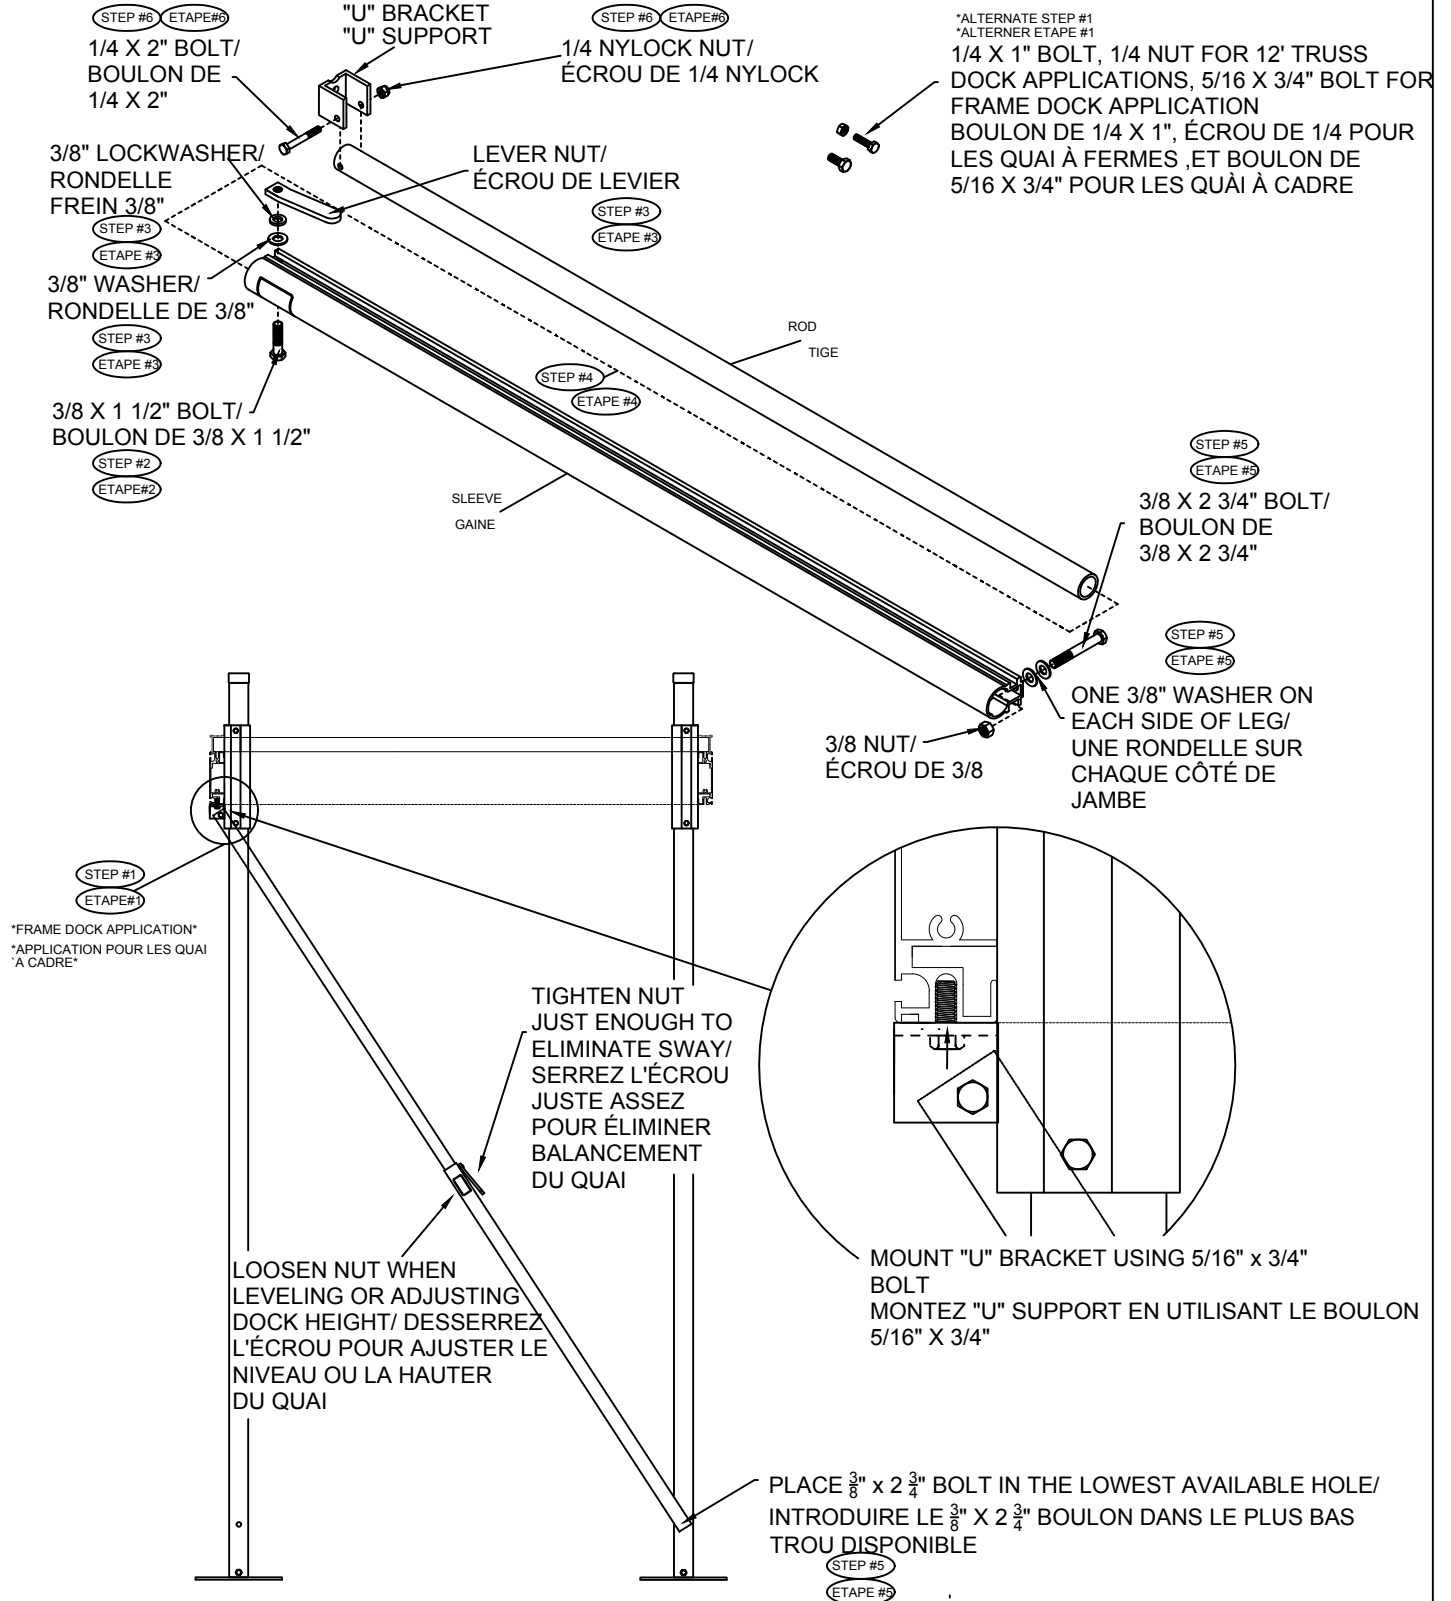

FENDOCK

WWW.FENDOCK.COM / INFO@FENDOCK.COM / (888) 336-3625 / (613) 722-6581

JUNE 14 / 2021

DRAWN BY
SW

DWG NO
2

TELESCOPIC DEEP WATER BRACE ASSEMBLY

STEP#1: MOUNTING OF "U" BRACKET

TRUSS DOCK APPLICATION-4' # 6' WIDE DOCKS:

REMOVE $\frac{1}{4}$ " NUT ON LOWER LEG RETAINER BOLT AT DEEP END OF DOCK, INSTALL "U" BRACKET WITH NOTCH IN BRACKET FACING UP AND RE-INSTALL $\frac{1}{4}$ " NUT.

TRUSS DOCK APPLICATION-12' WIDE DOCKS:

DETERMINE LOCATION OF "U" BRACKET (ROUGHLY IN THE CENTER OF THE 12' LOWER TRUSS) DRILL A $\frac{1}{4}$ " HOLE IN THE BOTTOM OF THE RAIL. MOUNT "U" BRACKET USING $\frac{1}{4}$ " X 1" BOLT AND NYLOCK NUT.

FRAME DOCK APPLICATION:

POSITION AND MOUNT "U" BRACKET USING $\frac{5}{16}$ " X $2\frac{3}{4}$ " HEX BOLT ON BOTTOM PORTION OF FRAME DOCK RAIL AT DESIRED LOCATION - PREFERABLY AS CLOSE TO APPOSING LEG AS POSSIBLE. BOLT WILL SCREW INTO THREADED CHANNEL ON BOTTOM OF FRAME CHANNEL.

STEP#2: INSERT $\frac{3}{8}$ " X 1 $\frac{1}{2}$ " BOLT THROUGH SLEEVE MAKING SURE BOLT HEAD RECESSES IN SLEEVE CHANNEL. BOLT HEAD WILL ONLY FIT INTO ONE SIDE OF THE CHANNEL.

STEP#3: INSTALL $\frac{3}{8}$ " FLAT WASHER, LOCK WASHER, AND LEVER NUT LOOSELY

STEP#4: INSERT ROD INTO SLEEVE AND GENTLY SNUG LEVER NUT

STEP#5: INSERT $\frac{3}{8}$ " X 2 $\frac{3}{4}$ " BOLT AND WASHER THROUGH LOWEST AVAILABLE HOLE IN LEG AND INSTALL ANOTHER WASHER ON THE OTHER SIDE OF THE LEG. HOLDING $\frac{3}{8}$ " NUT IN THE CHANNEL, THREAD BOLT ONTO NUT, ATTACHING THE SLEEVE TO THE LEG.

STEP#6: LOOSEN LEVER NUT AND EXTEND ROD UP TO MEET MOUNTED "U" BRACKET INSTALLED IN STEP#1. INSTALL $\frac{1}{4}$ " X 2" BOLT THROUGH BRACKET AND ROD, INSTALL NUT AND TIGHTEN.

STEP#7: DEEP WATER KIT IS NOW INSTALLED. LOOSEN LEVER NUT, ADJUST DOCK TO DESIRED HEIGHT AND SNUG LEVER NUT, ELIMINATING SWAY IN DOCK.

NOTE: HARDWARE FOR ALL APPLICATIONS ARE INCLUDED IN HARDWARE BAG.

ASSEMBLAGE STABILISATEUR EAUPROFONDE

ÉTAPE #1: MONTEZ SUPPORT EN "U"

QUAI À FERME APPLICATION - QUAIS 4' # 6' LARGE:

RETIRE L'ÉCROU DE "U" SUR LE PARTIE INTÉRIEURE DE LA DISPOSITIF DE JAMBE. INSTALLER LE SUPPORT EN "U" AVEC ENCOCHE DANS LE SUPPORT TOURNÉE VERS HAUT ET REINSTALLEZ L'ÉCROU $\frac{1}{4}$ "

QUAI À CADRE:

POSITIVEMENT MONTEZ LE SUPPORT EN FORME "U" UTILISANT UN BOULON À TÊTE HEXAGONALE À LA PARTIE INFÉRIEURE DE RAIL DE CADRE À L'ENDROIT DÉSERER, C'EST PRÉFÉRABLE D'ÊTRE AUSSI PROCHE QUE POSSIBLE À L'AUTRE JAMBE. LE BOULON VIS DANS LE CANAL FILETÉ À LA FOND DU CADRE.

ÉTAPE #2: INSÉRER LE BOULON À TRAVERSE LE MANCHON, S'ASSURANTE QUE LA TÊTE DE BOULON ÉVIDEMENTS DANS LA CANAL MANCHON. LA TÊTE DE BOULON POURRON SEULEMENT ADAPTÉ DANS UNE CÔTE DU CANAL.

ÉTAPE #3: INSTALLER LA RONDELLE PLATE, RONDELLE DE VERROUILLAGE, ET LE LEVIER D'UN MANIÈRE LÂCHE.

ÉTAPE #4: INSERT LE TIGE DANS LE MANCHON ET DOUCEMENT SERRÉ L'ÉCROU LEVIER.

ÉTAPE #5: INSÉRER LE BOULON ET LA RONDELLE À TRAVERSE LE TROU DISPONIBLE DANS LE JAMBE, LE PLUS BAS QUE POSSIBLE À LE FOND ET INSTALLER UN AUTRE RONDELLE DE L'AUTRE CÔTÉ DE LA JAMBE. TENIR LE $\frac{3}{8}$ " ÉCROU DANS LE CANAL FILETÉ LE BOULON SUR L'ÉCROU ENFIXANT LE MANCHON À LA JAMBE.

ÉTAPE #6: DESERRER L'ÉCROU LEVIER ET ÉTENDRE LE TIGE EN PLACE POUR ATTEINDRE LE SUPPORT "U" QUI ÉTÉ DÉJÀ INSTALLER DANS LE PREMIER ÉTAPE. INSTALLER LE BOULON TRAVERSANT LE TIGE, INSTALL L'ÉCROU ET SERRER.

ÉTAPE #7: STABILISATEUR DE L'EAU PROFOND EST MAINTENANT INSTALLÉ. DESERRER L'ÉCROU LEVIER, AJUSTE LE NIVEAU DE QUAÏ ET SERRER L'ÉCROU LEVIER

NOTE: QUINCAILLERIE POUR TOUS LES APPLICATIONS SONT INCLUS DANS LE SAC DE QUINCAILLERIE.

FENDOCK

WWW.FENDOCK.COM / INFO@FENDOCK.COM / (888) 336-3625 / (613) 722-6581

JUNE 14 / 2021

DRAWN BY
SW

DWG NO
3